


## GENERAL

The VL\* Series is designed for permanent vertical installations in a closet or recessed in the wall. Units of three tons and less can be installed with front return through the optional return air filter grille. An optional wall hanging kit is available, air conditioning and heat pump coils are available to match specific manufacturer's outdoor units. Various models are available for applications up to three tons of nominal cooling capacity.

Front panels are painted for an attractive appearance. Time delay fan relays are optional on all models. All model are pre-wired for heat pump application. Flowrator refrigerant metering devices are standard. Thermal expansion valve or check valves are available factory or field installed. All models are 208/230 VAC single phase 60 Hz and are provided with a 24-volt control transformer. Electric resistance heat available up to 10kW.

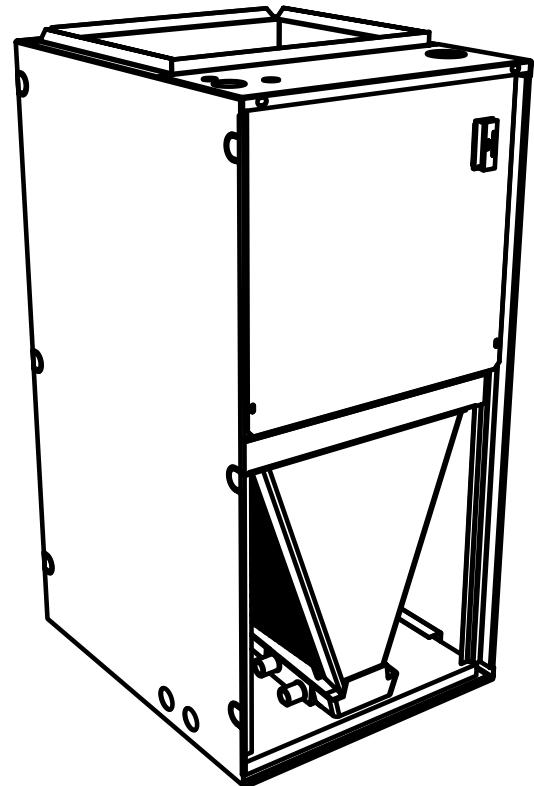

**⚠ WARNING:** Do not operate this unit unless all service panels/access doors are in place. If unit is located in the same area as the water heater or boiler, then the return air must be ducted to the unit. Seal all service entrances to the unit to prevent combustible byproducts from the water or boiler entering the air stream.

Installation of this unit shall be made in accordance with the National Electric Code, NFPA No. 90A and 90B, and any other local codes or utilities requirements.

**⚠ WARNING:** Due to possible damage to equipment or personal injury, installation, service and maintenance should be performed by a qualified technician. Consumer service is recommended only for filter replacement.

**⚠ WARNING:** Ensure all power is disconnected before installing or servicing this unit. More than one disconnect device may be required to de-energize the equipment. Hazardous voltage can cause severe personal injury. Make certain all panels are in place before operating this unit.

## UNPACKING

Carefully unpack the unit and inspect the contents for damage. If any damage is found at the time of delivery, proper notification and claims should be made with the carrier who delivered the unit.

Check the unit rating plate to ensure model number and voltage, plus any kits agree with what you ordered. The manufacturer should be notified immediately of any discrepancy of parts or shortage.

## LOCATION

The blower coil unit should be centrally located and may be installed in an attic, basement, or crawlspace with 0" clearance from any side, front, rear, or duct work. The unit must be installed in a level position to ensure proper condensation drainage. Make sure the unit is level in both directions within 1/8".

If the unit is going to be installed with the return air

# INSTALLATION GUIDE

through the base, remove the lower access door and remove the fiberboard insulation panel from the bottom channel. This channel may be used as a filter rack.

(VL - 20" x 20" x 1", VL\* - 24" x 24" x 1")

Be sure to replace the lower access door prior to operating the unit.

If the unit is to hang on the wall, an optional wall mounting kit is required. Carefully follow the instructions in the kit.

When the unit is installed in an enclosed area, the room should be large enough, and have an opening large enough to allow replacement of the unit. All servicing is done from the front and a clearance of 24" is needed for service, unless the closet door align with the front of the furnace. The unit is designed to sit on a platform or hang on the wall with an optional wall hanging kit.

The VL\* unit should not be installed in any location that is subject to freezing temperatures. If the VL\* is installed in a location where a water leak could cause damage, then an auxiliary drain pan should be installed.

## VL\* RECESSED INSTALLATION

When the unit is mounted flush in the wall between studs, the optional return air filter grille panel is required. The unit should position a minimum of 10" to 12" above the finished floor elevation between the studs of the wall. This will allow proper spacing to trap the primary and auxiliary condensate drains. (See Figure A)

Any modifications to the existing framing should be accomplished by the general contractor to ensure structural strength of the wall is maintained. The framed opening should be VL - 37.25" high and 18.50" wide, VLD should be 40 1/2" high and 22 1/2" wide.

The unit should be positioned so that the front edge of the cabinet is flush with the front face of the wall stud. All service connection openings are recessed away from the front to allow clearance for 3 1/2" wall framing. Three installation tabs are provided on each side of the unit to facilitate mounting, bend the tabs out 90° and the tabs will position the unit to allow for 1/2" sheet rock finished walls.

## TYPICAL RECESSED INSTALLATION

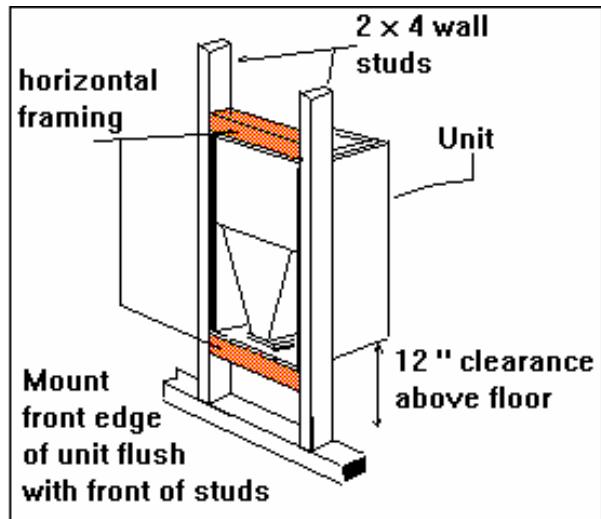


Figure A.

## VL\* CLOSET INSTALLATION

The VL\* unit is designed for installation in a closet, on a platform or for the hanging on a wall. The return air is drawn through the base of the unit. The filter in the base of the unit may be used or a remote return air filter grille may be utilized.

The platform must be constructed sufficiently to support the unit. The unit should be mounted within 1/8" of level to allow for proper condensate drainage. The closet should be adequate size to allow for proper service of the unit and the door must be sized to allow the unit to be removed. If the unit is mounted on the wall, then you may utilize the tabs on the rear of the unit if they align with a solid wall material capable of supporting the weight of the unit or you may utilize the optional wall hanging kit. Follow the instructions in the kit carefully.

## CAUTION

*If the unit is located in the same room as the gas water heating appliance, then the return air must be ducted from the conditioned space to the air handler and all doors must be secured in place before operating the system. Make certain that the combustible byproducts of the water heating appliance can not enter the air stream of this system. Contact the local gas inspection department or contact the factory if you have any question concerning this matter.*

# INSTALLATION GUIDE

## DUCT WORK

The duct work should be installed in accordance with the NFPA No. 90A "Installation of Air Conditioning and Ventilating Systems" and No. 90B "Residential Type Warm Air Heating and Air Conditioning Installation".

The duct work should be insulated in accordance with the applicable requirements for the particular type installation as required by HUD, FHA, VA, the applicable building code, local utility or other governing body.

## CONDENSATE DRAINS

The unit is supplied with 3/4" primary and auxiliary condensate drains. Both drains must be trapped outside the unit and piped in accordance with the applicable building codes. Do not reduce the drain line size less than the connection size on the drain pan. Condensate should be piped to an open drain or to the outside. All drains must pitch downward away from the unit a minimum of 1/8" per foot of line to ensure proper drainage. For safety it is recommended that a float switch be installed.

## REFRIGERANT PIPING

Refrigerant pipe connections are located on the top of the unit. Refrigerant piping external to the unit shall be sized in accordance with the instructions of the manufacturer of the outdoor equipment. When units are recessed in the wall, make certain that piping connections are pressure tested prior to the wall being closed.

## METERING DEVICE

All units are shipped with a check-flow piston installed which is designed for air conditioning or heat pump operation. If your application requires a thermal expansion valve or check expansion valve then it is necessary to remove the piston from the distributor assembly and install the proper metering device. Be sure to follow the instruction in the kit to ensure proper installation.

## BLOWER

This unit is supplied with a multi-speed motor with a direct drive blower wheel which can obtain various air flows. The unit is shipped with the blower connected for high speed. If a lower blower speed is required, disconnect all power to the unit, remove the black indoor fan motor lead from the fan relay, place an insulated cap on the black lead, remove the insulated cap from the red indoor fan motor lead, place a spade connector on the lead and connect it to the fan relay where the black lead was originally connected. Be sure to check the air flow and the temperature drop across the evaporator coil to ensure that you have sufficient air flow.

## WIRING

Consult all schematic and pictorial wiring diagrams of this unit and the outdoor equipment to determine compatibility of the wiring connections and to determine specific requirements.

All field wiring to the blower coil should be installed in accordance with the latest edition of the National Electric Code NFPA No. 70 and any local codes.

Check rating plates on unit for rated volts, minimum circuit ampacity and maximum over current protection. Supply circuit power wiring must be 75°C (167°F) minimum copper conductors only. Copper supply wires shall be sized to the National Electric Code or local code requirements, whichever is more stringent. The unit is shipped wired for 115/120 or 230/240 Volt AC 60Hz 1 Phase operation. If the unit is to be operated at 208 VAC 60 Hz, then follow the instructions on the indoor unit wiring diagram to change the low voltage transformer to 208 VAC operation.

### **Be sure the unit is properly grounded.**


Class 2 low voltage control wiring should not be run in conduit with the power wiring unless class 1 wire of proper voltage rating is used. Low voltage control wiring should be 18 Awg, color coded (105°C minimum). For lengths longer than 100ft., 16 Awg wire should be used. Make certain that separation of control wiring and power wiring has been maintained.

# INSTALLATION GUIDE

## AIR FILTER

An air filter must be installed prior to the air entering the evaporator coil to protect the coil, blower, and other internal parts from excessive dirt and dust. If the unit is installed for the return air through the unit base, then the internal filter rack may be utilized.

If you decide to use a remote filter, then it should be sized for a maximum of 300 ft./min. air velocity. If the unit is recess mounted in a wall utilizing the optional wall mount return filter grille be sure to install a filter in the panel. The door must be fastened in place securely to ensure proper filtration of return air.

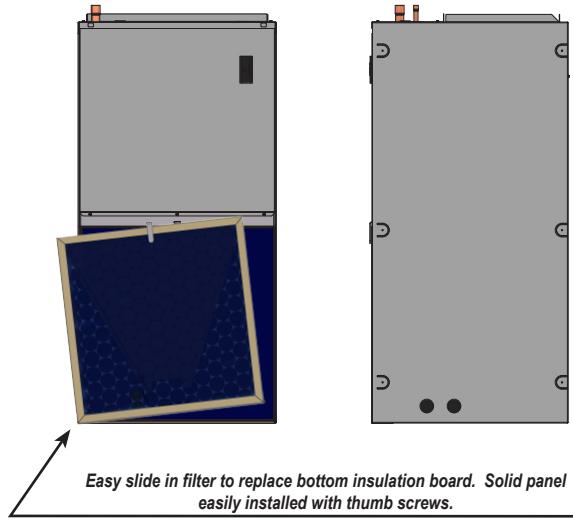

## THERMOSTAT

Select a thermostat that is commonly referred to as a single stage cooling with electric heat sub base. This stat will energize the fan on a demand for heat or cool.

Install the T-Stat on an inside wall, away from the drafts, lights, or other heat sources in a location that has good air circulation from the other rooms being controlled by the T-Stat. The T-Stat should be mounted 4 to 5 feet above the floor.

Refer to the wiring diagram in the back of this manual for complete wiring instructions.

## SEQUENCE OF OPERATION

**Cooling (Cooling only or heat pump with reversing valve energized in heat mode):** When the T-Stat calls for cooling, the circuit between R and G is complete, and the blower relay is energized. The N.O. contacts will close, which allows the indoor blower to operate. The circuit between R and Y is completed causing the contactor on the outdoor equipment to close, and start the compressor and the outdoor fan motor. The circuit between R and O is completed causing the contactor on the outdoor equipment to close, and start the compressor and the outdoor fan motor.

**Cooling (Heat pump with reversing valve energized in cooling mode):** When the thermostat calls for cooling, the circuit between R and G and R and O is complete. Circuit R and O energizes the reversing valve to the cooling position. Circuit R and G energizes the blower relay. The N.O. contacts will close after a time delay then the indoor blower will operate. The circuit between R and Y is complete. Which causes the contactor on the outdoor equipment to close, and the start the compressor and the outdoor fan motor.

**Heating (Electric heat only):** When the thermostat calls for heat, the circuit between R and W is completed. The heat sequencer is energized. A time delay will occur, which allows the heating element(s) and the indoor blower motor to come on.

**Heating (Heat pump reversing valve energized in the heat mode):** When the thermostat calls for heat the circuits between R and B, R and Y and R and G are completed. Circuit R and B energize the reversing valve switching it to the heat position. Circuit R and Y energized the outdoor unit contactor starting the compressor and outdoor fan. Circuit R and G energizes the blower relay starting the blower motor.

If the indoor room temperature should continue to fall, circuit R and W2 is by the second-stage heat bulb on the thermostat. Circuit R-W2 energizes the heat sequencer. The complete circuit will energize the supplemental electric heat.

**Blower Time Delay:** This unit is equipped with timed on and a timed off relay. This relay delays the start and delay the stopping of the indoor fan motor to

# INSTALLATION GUIDE

maximize the efficiency of the unit.

**Defrost.** When the unit starts the defrost cycle supplemental heat can be provided by connecting B on the blower coil to the defrost relay on the outdoor heat pump. This will complete the circuit between R and B (in the blower coil) through a set of contacts in the defrost relay in the outdoor unit. This circuit when it is connected, will help prevent cold air from being discharged from the indoor unit during the defrost.

## START-UP

Once all connections are complete the unit should be started up, and a check out of the completed system should be performed. Before performing any system test, make sure that all grilles, registers, and dampers are open and set to the correct position. Also make certain that the air filter is installed in the return air prior to running the air handler.

A performance test should be conducted in the accordance with the outdoor equipment manufacturer's instructions. Airflow tests should be conducted in the heating and cooling modes to ensure satisfactory operation.

## MAINTENANCE

The system air filter(s) should be inspected, cleaned or replaced at least monthly. If the filter is mounted internal to unit, make sure that electrical power is disconnected before removing the access panels. Make certain the access panels are replaced and secured properly before placing the unit back in operation. This product is designed for dependable service, however periodic maintenance should be scheduled to be conducted by trained professional service personnel. This service should be conducted at least annually, and should include testing and inspection of electrical and refrigerant components. The heat transfer surface should be cleaned. The blower motor is permanently lubricated for normal operating conditions.



**WARNING**



**Do not store or use any corrosives or combustibles in the vicinity of this unit. All panels must be in place and properly secured before operating this equipment.**

**All electrical power servicing this unit must be disconnected prior to removal of any panels. Service of this unit must be accomplished by qualified trained professional personnel only.**




**WARNING**




**Warranty will be voided if any chemical cleaning products are used on any AllStyle coils. AllStyle suggests water and a soft, bristled brush.**



# WIRING DIAGRAM

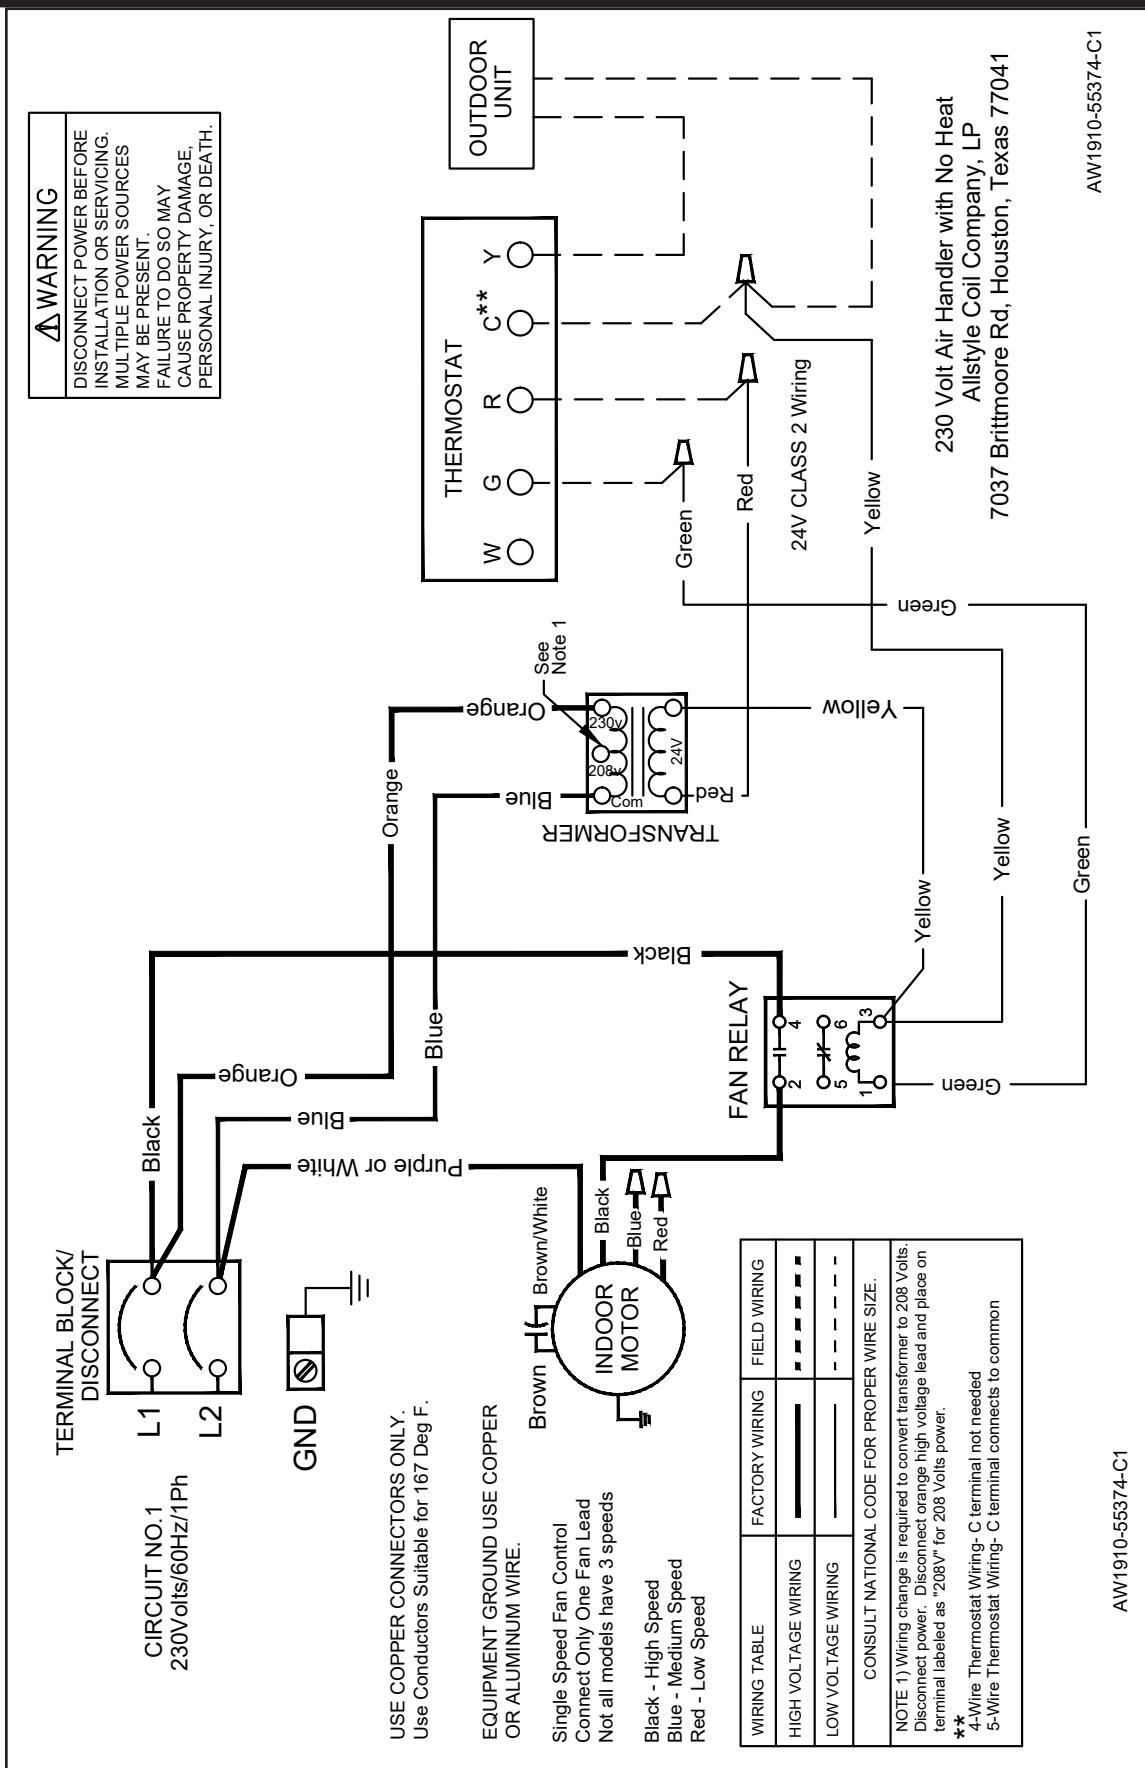


# WIRING DIAGRAM

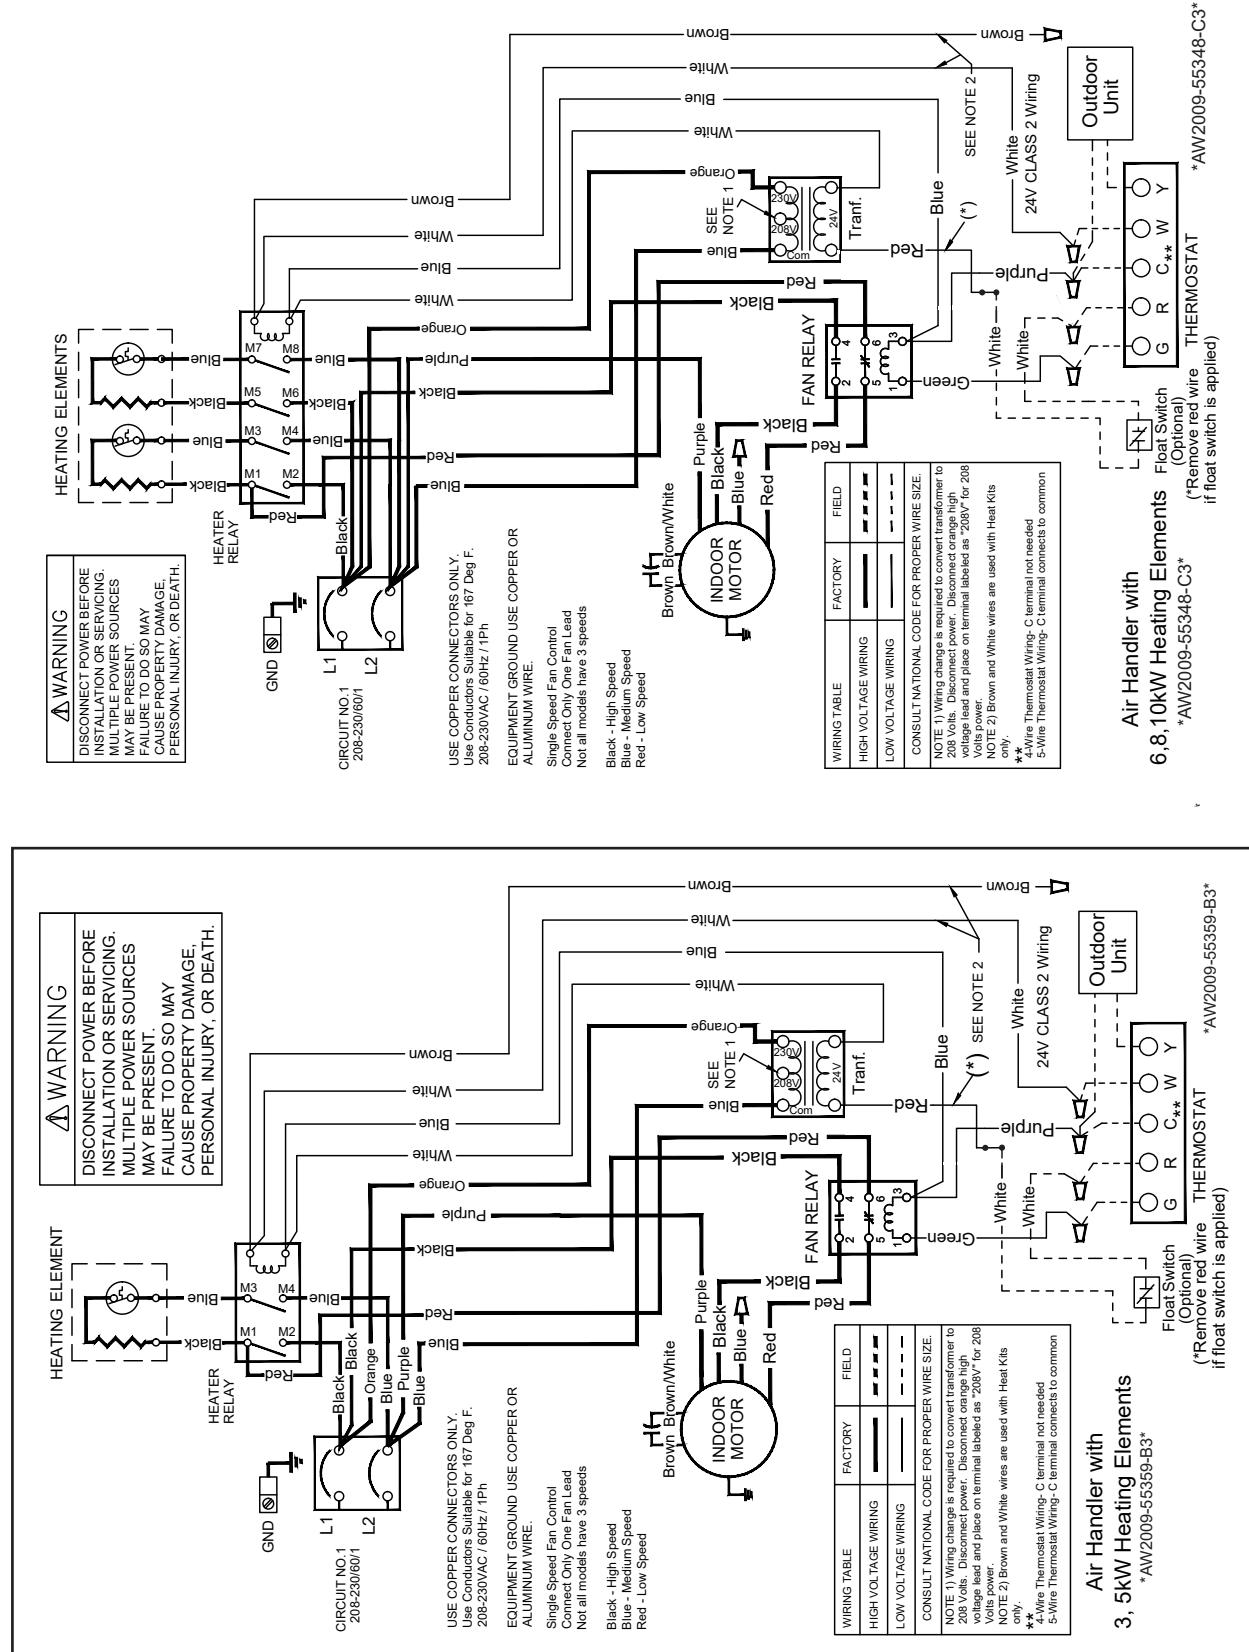

# WIRING DIAGRAM

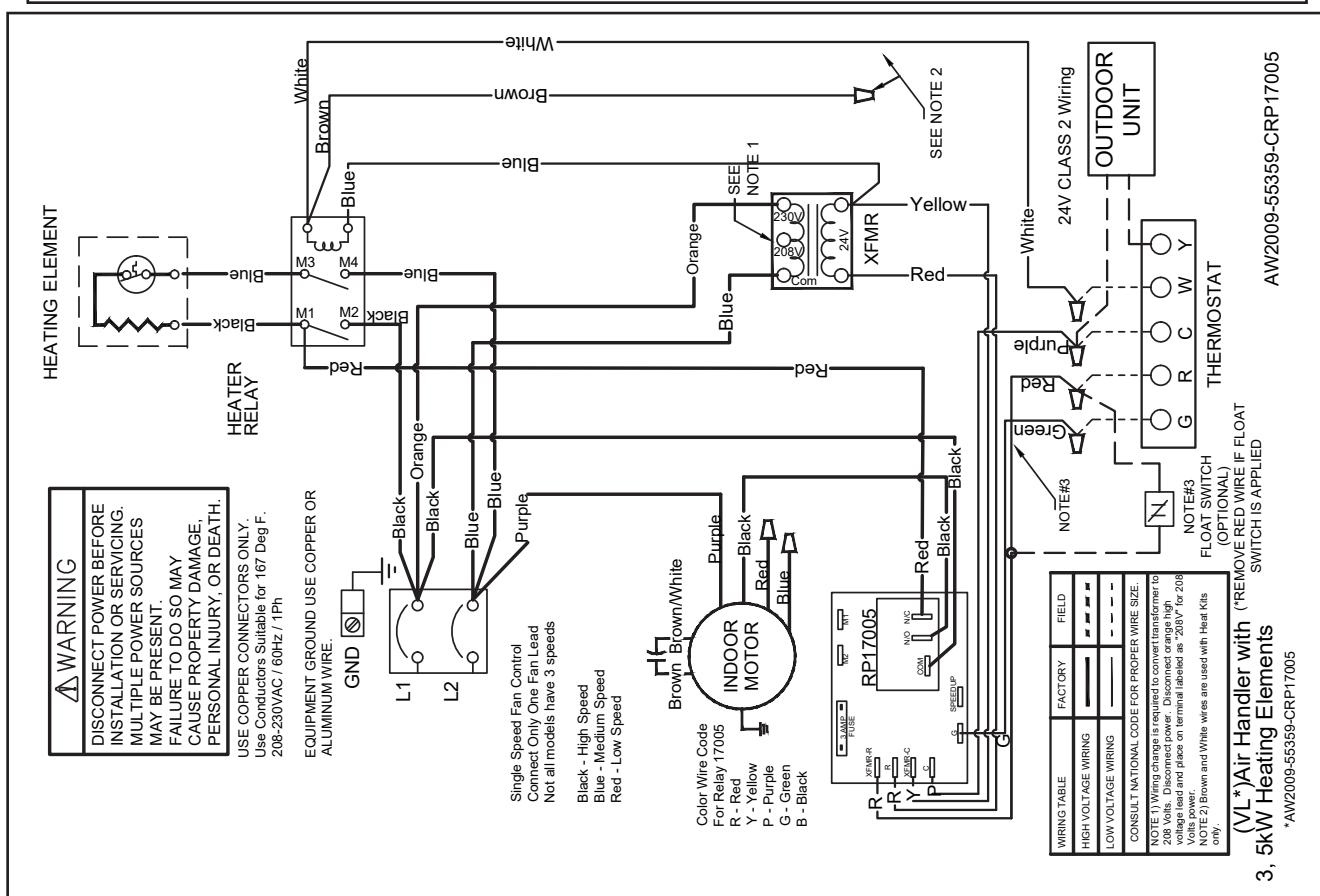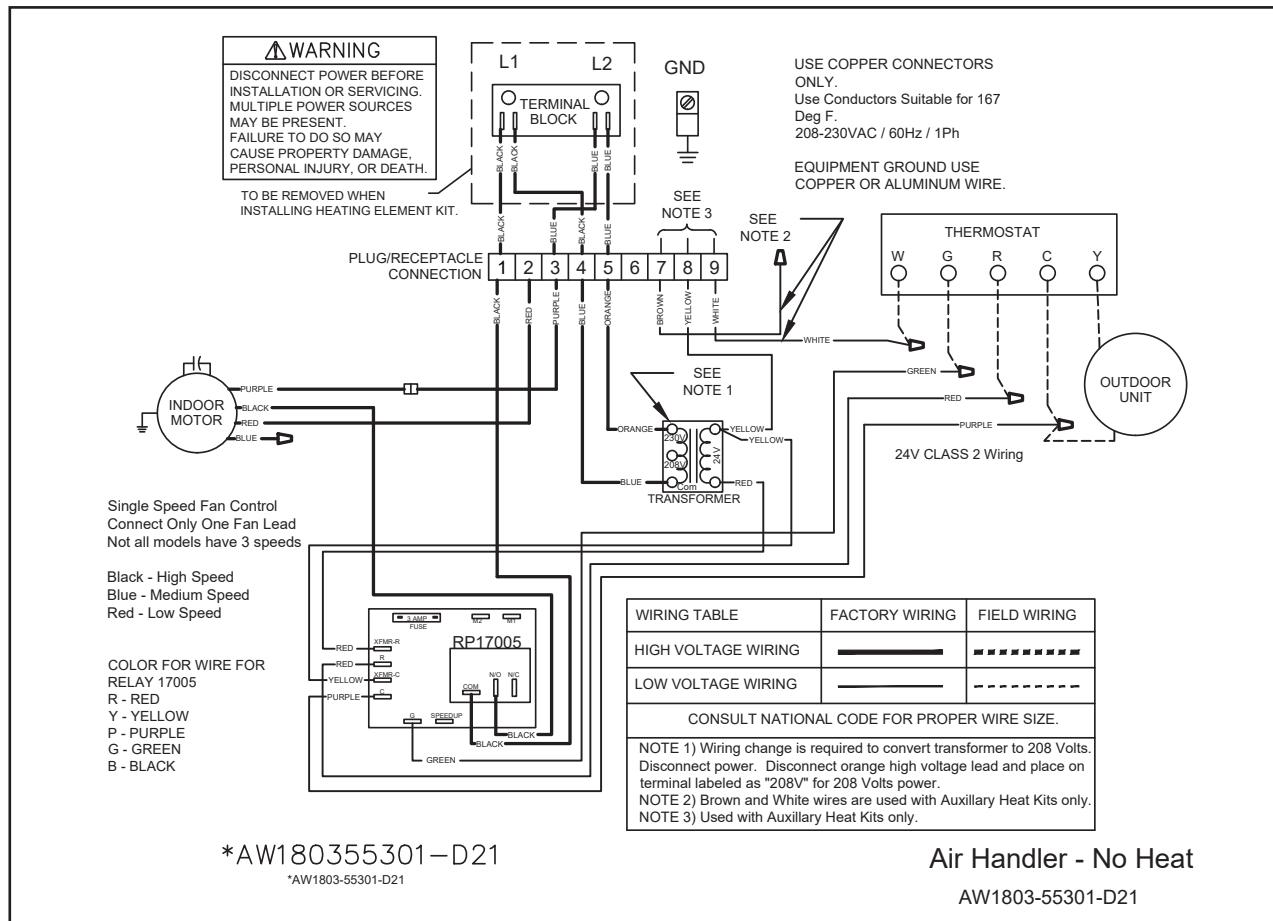

# WIRING DIAGRAM

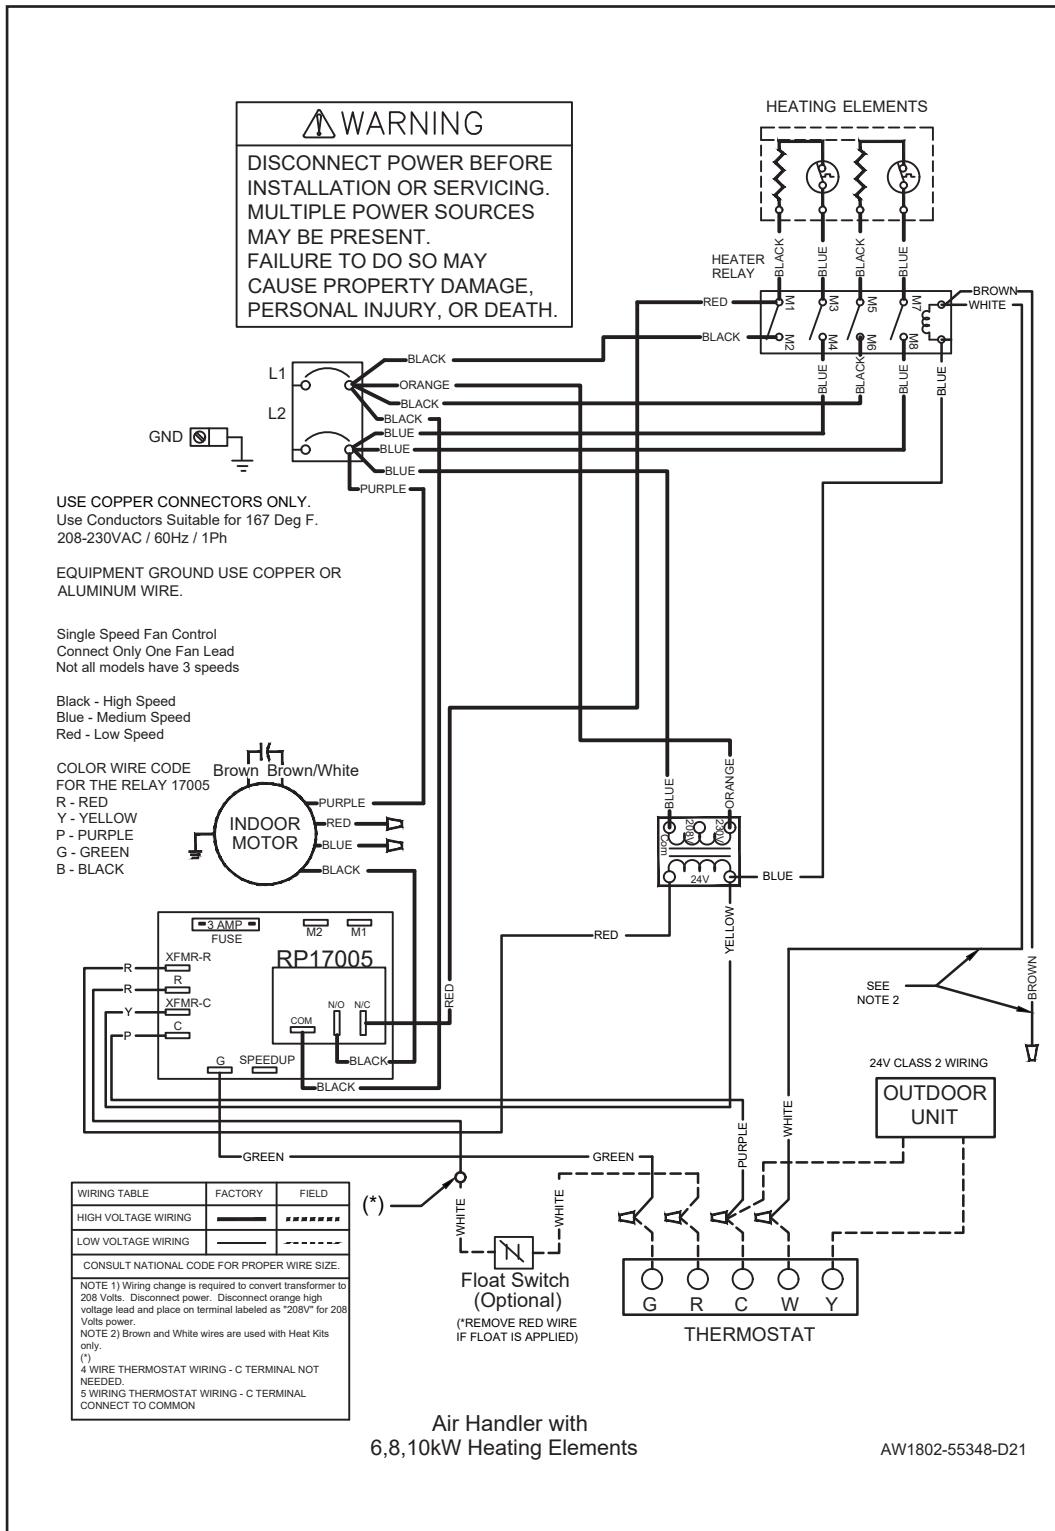

## NOTES:

## NOTES:



8.2021